



Introduction	2
Important Notes	3
Safety Information	4
Child Seat Features	6
Vehicle Safety Belts	8
Vehicle Seating Positions	10
Installation: Forward Facing	11
Installation: Rear Facing	15
Installation In Aircraft	19
Versa-Tether™	20
Checking Buckle Position	24
Recline Adjustment	24
Using the Buckle	25
Using the Chest Clip	25
Securing Your Child	26
Checking Harness Height	28
Adjusting Harness Height	29
Care and Maintenance	30
Warranty Information	34
Registration Information	Back Cover

These products and their components are subject to change without notice.

"Britax" is a registered trademark of Britax Excelsior, Andover, U.K.

© 2000-2002 Britax Child Safety, Inc. All rights reserved.

User Guide Printed in U.S.A.

This instruction booklet covers two Britax child seats. Refer to the labeling on your child seat to identify which model you have.

The Roundabout™ and Advantage™ are designed for use only by children who weigh between 5 and 30 pounds (2.3 and 13.6kg) when used rear facing and between 20 and 40 pounds (9 and 18kg) when used forward facing. These child restraint systems conform to all applicable Federal motor vehicle safety standards. Both models are certified for use in motor vehicles and aircraft as specified in this user guide.

The Roundabout™ and Advantage™ are not to be used in the home, in boats or other non-certified applications.

Read and understand this information booklet before using this product. It is recommended that you store this booklet in the pouch provided on the rear of the restraint for further use and that you consult it often to ensure that you are using the restraint correctly.

- Verify that the child seat is secure and that the harness is properly adjusted around your child each time you use the child seat.
- Adjust the harness to fit the clothes your child is wearing. The fitting for a child in winter clothes will differ from a child in summer clothes.
- Cover the child seat if your vehicle is parked in direct sunlight. Parts of the child seat can become hot to the touch in sunny weather.
- Store the child seat in a safe place when it is not being used. Avoid placing heavy objects on top of it.
- Discontinue use of a child seat that is older than six years or has been in a severe crash. This ensures that no deterioration or hidden damage has occurred.
- DO NOT leave children alone in a vehicle, even for a short time.
- DO NOT, except as described in this booklet, attempt to disassemble any part of the child seat or change the way its harness or your vehicle seat belts are used.
- DO NOT leave loose objects, e.g. books, bags, etc., in the back of your vehicle. In the event of a sudden stop, loose objects will keep moving, potentially causing serious injuries.
- DO NOT leave folding vehicle seats unlatched. In the event of a sudden stop, a loose seat back could prevent the child restraint from protecting your child as well as it should.
- DO NOT allow children to play with the child seat.
- DO NOT use anything to raise the restraint off the vehicle seat. In an accident, it could slide and be unable to protect your child as well as it should.




WARNING

- FAILURE TO FOLLOW EACH OF THE FOLLOWING INSTRUCTIONS CAN RESULT IN YOUR CHILD STRIKING THE VEHICLE'S INTERIOR DURING A SUDDEN STOP OR CRASH. SECURE THIS CHILD RESTRAINT WITH A VEHICLE BELT AS SPECIFIED IN THIS USER GUIDE.
- According to accident statistics, the National Highway Traffic Safety Administration recommends that parents select the rear seat as the safest location for a properly installed child restraint. However, the actual dimensions of the vehicle seat and the details of the safety belts used to anchor the child restraint differ from vehicle to vehicle. Please study the section on *Vehicle Seat Belts* in this booklet for the safety assurance of your child. If in doubt about installing your child restraint, consult your vehicle owner's manual.
- Secure this child restraint with the vehicle belts even when it is not occupied. In a crash, an unsecured child restraint may injure vehicle occupants.




WARNING

- The primary protection for occupants of a vehicle in a collision is the body of the vehicle itself, and a child restraint will not protect a child when the vehicle is seriously impacted. However, correctly installed, this restraint will substantially improve the chances for survival in most accidents. Make sure that you fully understand the correct way to use this child restraint in your vehicle.
- DO NOT place any child restraint in the front seat of a vehicle with a passenger air bag unless the air bag is turned off. DEATH or SERIOUS INJURY can occur. The back seat is the safest place for children under 12.
- Owners of vehicles with air bags should refer to their owner's manual for child restraint installation instructions.
- Britax recommends that all child restraints be installed in the rear seat.
- Install this child seat only in vehicle seats which face forward! Do not install this seat on vehicle seats facing sideways or backwards!

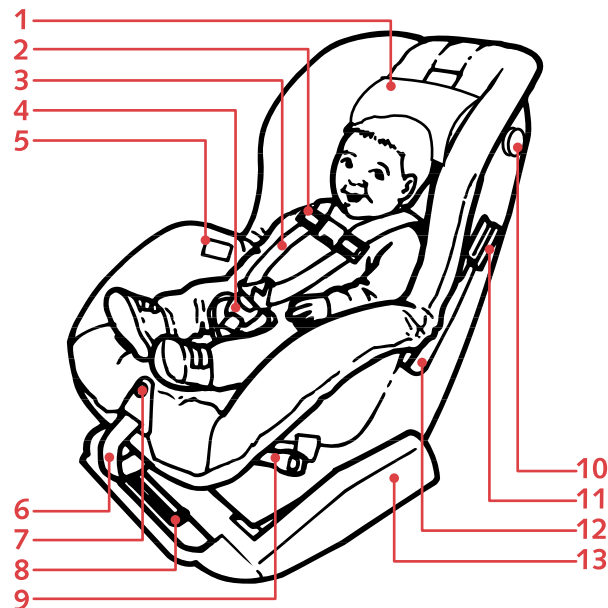

- | | |
|--------------------|--------------------------|
| 1 Headrest* | 6 Harness Adjuster Strap |
| 2 Chest Clip | 7 Harness Release Button |
| 3 Shoulder Harness | 8 Recline Handle |
| 4 Buckle/Belly Pad | 9 Rear Facing Lock-off |
| 5 Harness Holder | 10 Adjuster Knob* |

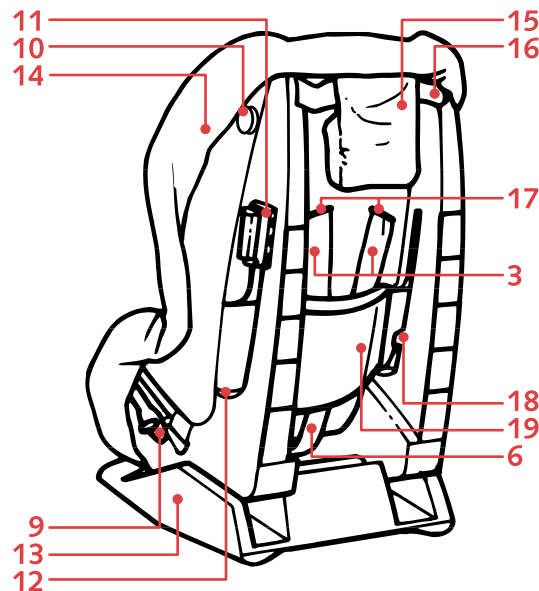

- | | |
|-----------------------------|-------------------------------|
| 11 Forward Facing Lock-off | 16 Versa-Tether™ |
| 12 Forward Facing Belt Slot | 17 Harness Slots |
| 13 Base | 18 Lap Belt Positioning Guide |
| 14 Cover | 19 Seat Belt Guard |
| 15 Versa-Tether™ Pouch | |

* Advantage™ Only

Vehicle Safety Belts



IMPORTANT: Some vehicles have no seating positions which are compatible with this child seat, or any other child seat. If in doubt contact your vehicle manufacturer for assistance.

The following types of vehicle seat belts are not compatible with this child seat:



- ✗ Front seat belts with top or bottom anchorage points in the door.
- ✗ Motor driven automatic seat belts.
- ✗ Three-point belts that have separate retractors for the shoulder section and the lap section.
- ✗ Non-locking (ELR) two-point seat belts.

The owner's manual for your vehicle will have information on the types of seat belts in your vehicle. If you have belts of the above-listed types, select another seating position. This child seat will work with rear seat three-point seat belts with a sliding latch plate, and with rear seat three-point seat belts that are specifically marked as appropriate for child seats. The middle rear seat of most vehicles has a lap belt which most often will work.

This child seat can fit securely in most vehicles using the existing seat belts. However, some types of vehicle designs prevent a secure fit of the child seat due to the position of the seat belt lower anchorage points.

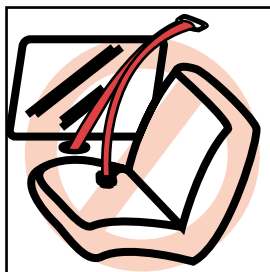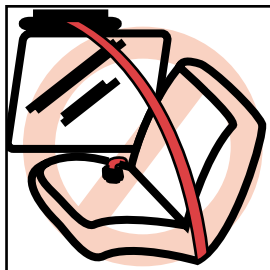

Vehicle Safety Belts

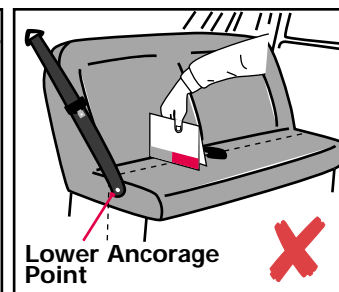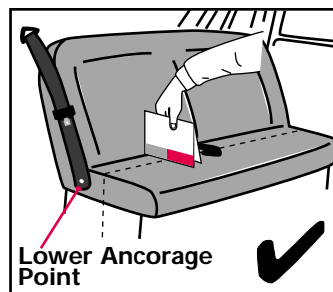

Use this simple guide to check your seat belts and determine the safest position for your child seat.

Use the gray shaded area on the side of this page to determine the best position for the child seat. Hold the page against your vehicle seat (as shown above) with the gray area toward the back of the seat. Now check to see if the lower seat belt anchorage points are in line with the gray or the red area of this page.

- ✓ If the lower seat belt anchorage points are in the gray area, then you can use this position for your child seat.
- ✗ If the lower seat belt anchorage points are in the red area, then you should use another position for your child seat.


NOTE: Although the seat belt anchorage points fall within the gray area, a better installation may be achieved by adjusting your child seat to a reclining position.

Seat Belt Anchorage Points MUST Fall Within This Shaded Area

Seat Belt Anchorage Points MUST Fall Within This Shaded Area



WARNING

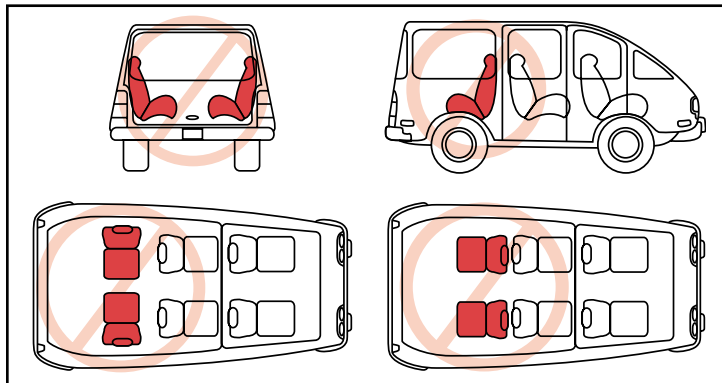

- Forward facing vehicle seats **MUST** be used with this child seat. Side facing or rear facing seats in vans, station wagons or trucks **CANNOT** be used.
- Britax and the U.S. Department of Transportation warn that children 12 and under must ride in the rear seats, away from front air bags. The only exception is if the air bag is off.

Forward Facing Lap-Shoulder Belt Installation




Figure A illustrates a typical lap-shoulder seat belt configuration.

1 Place the child seat forward facing on the vehicle seat.

2 Pass the seat belt through both side slots and fasten buckle.

3 Fasten the seat belt, then verify that the seat belt is not twisted (*Fig. B*).

4 Before continuing, make sure that the lap portion of the seat belt passes under **BOTH** lap belt positioning guides (*Fig. C*).

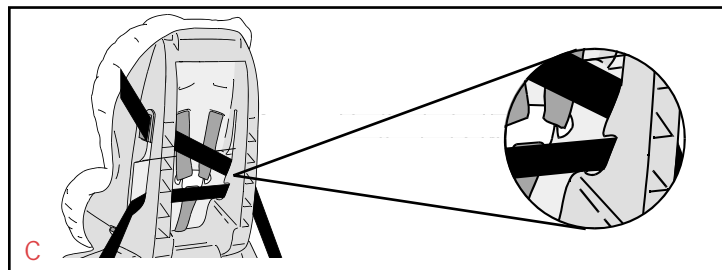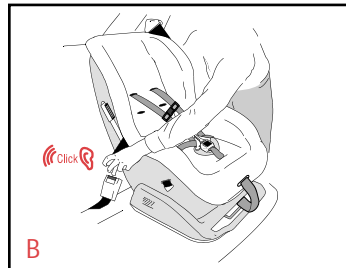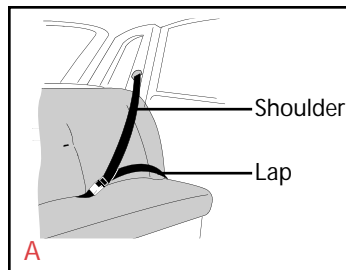

Installation: Forward Facing

5 Press to open the lock-off (Fig. D).

NOTE: Although the child seat has two forward facing lock-offs, you will only need to use one. Always use the lock-off that is farthest away from where the seat belt is buckled.

6 Pull the shoulder portion of the seat belt tightly through the lock-off to remove slack (Fig. E).

7 Hold the shoulder belt tight, then rotate the lock-off toward the child seat until it clicks in place (Fig. F).




IMPORTANT: Lock-off is not engaged and vehicle belt is not secured until a click is heard when closing the lock-off.

8 Verify that the seat belt is tight and the child seat is secure.

See *Checking Buckle Position* on Page 24.

Removal

To remove the child seat, simply unfasten the seat belt and reverse the above directions.

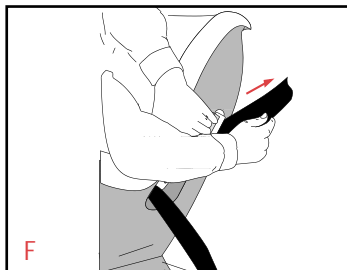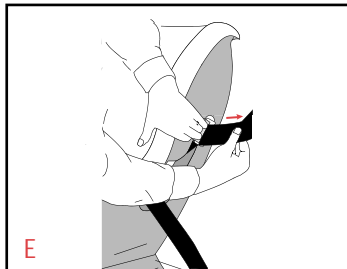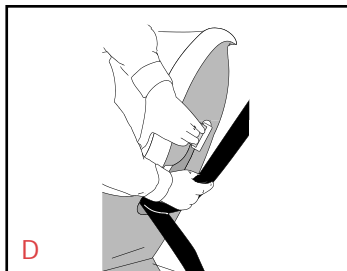

Installation: Forward Facing




Forward Facing Lap Belt Installation

1 Place the child seat facing forward on the vehicle seat.

2 Pass the seat belt through both side slots.

3 Fasten the seat belt, then verify that the seat belt is not twisted (Fig. B).

4 Before continuing, make sure that the lap belt passes under BOTH lap belt positioning guides (Fig. C).

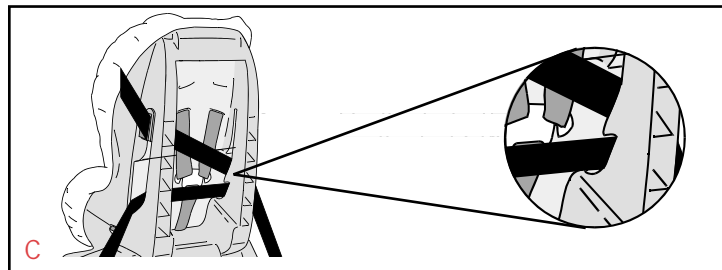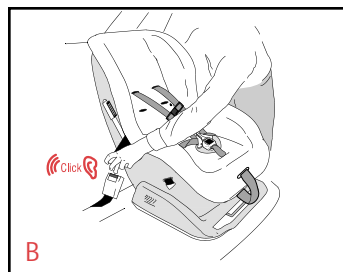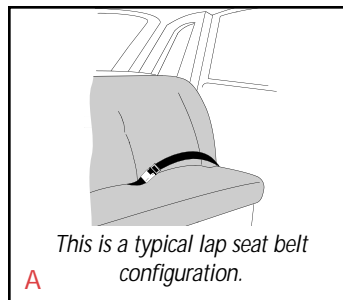

Installation: Forward Facing

5 Press child seat into vehicle seat, while removing slack from the lap portion of the seat belt (*Fig. D*).

6 Verify that the seat belt is tight and the child seat is secure.

See *Checking Buckle Position* on Page 24.

Removal

To remove the child seat, unfasten the seat belt and reverse the above directions.



Installation: Rear Facing

Rear Facing

Lap-Shoulder Belt Installation

1 Place the child seat rear facing and fully reclined on the vehicle seat.

2 Tighten harness (*Fig. A*).




3 Pull the vehicle belt out, then hold the lap and shoulder sections together. Keep the sections together as you pass the seat belt through the closest rear facing belt slot (*Fig. B*).

NOTE: The seat belt can be routed over or under restraint's cover.

4 Route belt behind/under the buckle strap, then through the second rear facing belt slot (*Fig. B*).

5 Fasten the seat belt, then verify that the seat belt is not twisted (*Fig. C*).

6 Press child seat into vehicle seat, while removing slack from the lap portion of the seat belt.

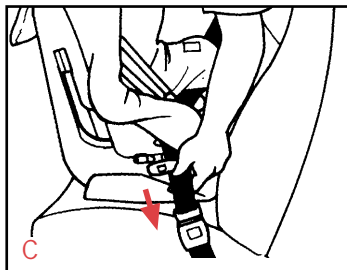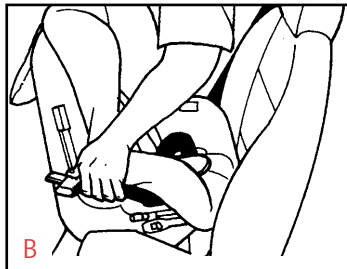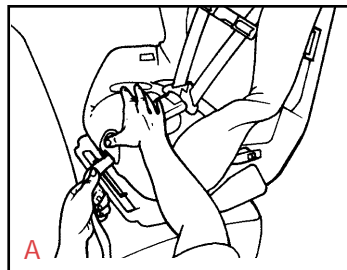

Installation: Rear Facing

7 Maintain pressure on child seat, then tighten shoulder portion of seat belt (*Fig. D*).

8 Position both sections of seat belt through the open lock-off, then close lock-off arm. Lock-off is properly closed when a positive click is heard (*Fig. E*).



IMPORTANT: Never bend the plastic lock-off arm up or down... it will break off!

NOTE: Although the child seat has two rear facing lock-offs, you will only need to use one. Always use the lock-off that is closest to the seat belt buckle.

9 Verify that the seat belt is tight and the child seat is secure.

Removal

To remove the child seat, unfasten the seat belt and reverse the above directions.

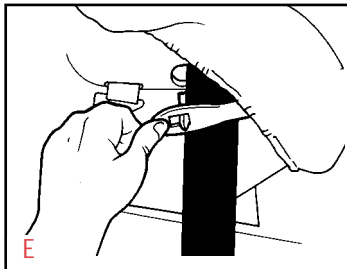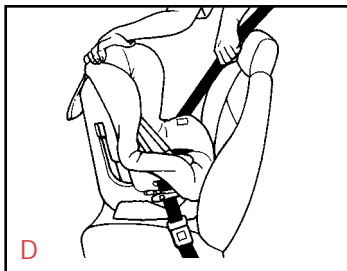

Installation: Rear Facing

Rear Facing Lap Belt Installation

1 Place the child seat rear facing and fully reclined on the vehicle seat.

2 Tighten harness (*Fig. A*).



3 Pull the vehicle belt out, then pass the seat belt through the closest rear facing belt slot.

NOTE: The seat belt can be routed over or under restraint's cover.

4 Route belt behind/under the buckle strap, then through the second rear facing belt slot (*Fig. B*).

5 Fasten the seat belt, then verify that the seat belt is not twisted (*Fig. C*).

6 Press child seat into vehicle seat, while removing slack from the seat belt.

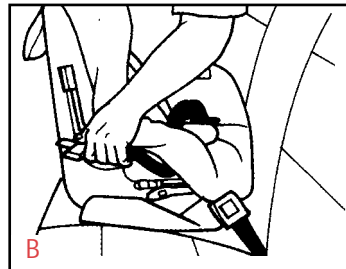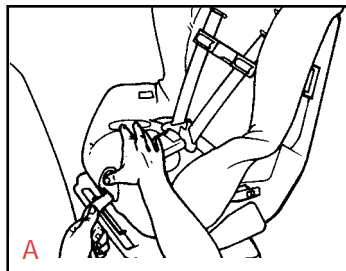

Installation: Rear Facing

7 Position seat belt through the open lock-off, then close lock-off arm. Lock-off is properly closed when a positive click is heard (Fig. D).

IMPORTANT: Never bend the plastic lock-off arm up or down... it will break off!

NOTE: Although the child seat has two rear facing lock-offs, you will only need to use one. Always use the lock-off that is closest to the seat belt buckle.

8 Verify that the seat belt is tight and the child seat is secure (Fig. E).



Removal

To remove the child seat, unfasten the seat belt and reverse the above directions.

Rear facing installation can be improved by the use of the Versa-Tether™. (see pages 22—23)

If you have a problem stabilizing your child seat, use a rolled towel in the crease of the seat to help level the child seat base.


CAUTION: DO NOT raise the base beyond horizontal or off of the vehicle seat; this could reduce the protection for your child.

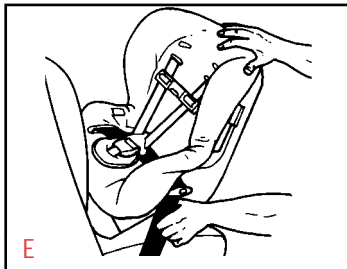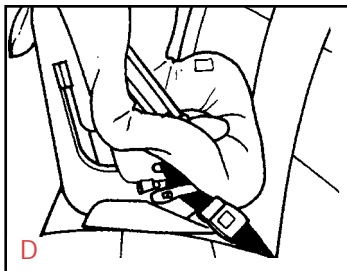

Installation In Aircraft

This child seat is certified for use on aircraft. Most airlines in the U.S. and Canada will allow you to use a child seat if it is labeled as an approved child restraint for airline use and fits properly on the plane. Contact your airline about their policy prior to travelling.

- Use your child seat only on forward facing aircraft seats!
- Place the child seat next to a window to avoid blocking the aisle.
- If the aircraft lap belt is too short, ask the flight attendant for a *belt extender*.

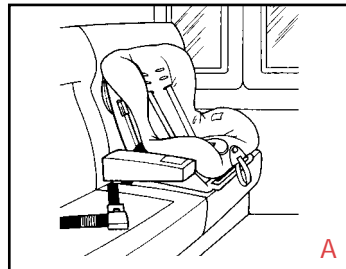

Forward Facing Installation

Install your child seat forward facing in an aircraft according to pages 13—14.

Rear Facing Installation

Install your child seat rear facing in an aircraft according to pages 17—18.




NEVER ATTACH A FORWARD FACING TETHER TO A LOCATION THAT IS NOT RECOMMENDED BY YOUR VEHICLE MANUFACTURER OR TO A LOCATION THAT YOU BELIEVE IS INCORRECT OR NOT STRONG ENOUGH. IF THE TETHER ANCHOR COMES LOOSE IN A CRASH, THE METAL HOOK CAN INJURE VEHICLE OCCUPANTS.

- Britax recommends that the tether be used at all times. Using the tether will improve the stability of your child restraint and reduce the risk of injury.
- If your vehicle does not currently have a tether anchor attachment refer to your vehicle owner's manual or contact your vehicle manufacturer for assistance.
- If a tether anchorage is not available, you should NOT modify your vehicle without advice from your vehicle manufacturer.

Forward Facing Versa-Tether

- 1 Once your child seat is in a secure, seat belted position, facing forward, locate the tether and remove from pouch.
- 2 Lift the adjuster tab on the tether strap out, then pull to fully extend tether.
- 3 Locate the tether anchor in your vehicle. Use a tether anchor in location *a* or *b* in the illustration on page 21.

IMPORTANT: If in doubt about your tether anchorage point or if your vehicle is not equipped with a tether anchorage point, check your vehicle owner's manual or contact your vehicle manufacturer for assistance.

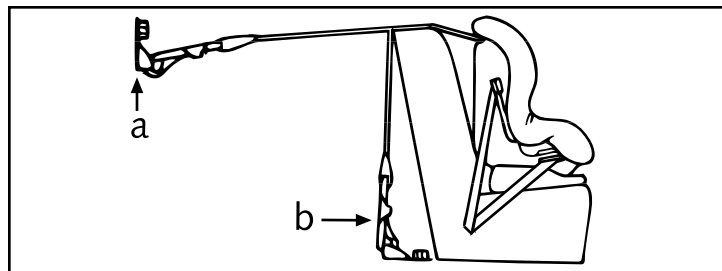

4 Hook the tether to the tether anchor point, then pull on the tether belt to remove any slack.


5 Verify that there is tension in the tether strap and that child seat is properly secured.

Releasing the Versa-Tether

To release the Versa-Tether, lift the adjuster tab on the tether strap, then pull to loosen. Unhook the tether from tether anchor point to release child seat.

Rear Facing Versa-Tether

- 1 Once your child seat is in a secure, seat belted position, facing rearward, locate the tether and remove from pouch.
- 2 Lift the adjuster tab on the tether strap out, then pull to fully extend tether.
- 3 Locate the hook on the strap. The hook latch can be opened and closed by pressing your thumb against the latch.
- 4 Place the restraint in the selected vehicle seating position. Follow the section *Installation: Rear Facing* on pages 15—18.
- 5 Locate an acceptable location for the tether to be anchored. Use *a.*, *b.*, or *c.*, whichever provides a more stable and secure mounting. Check your vehicle owner's manual or contact your vehicle's manufacturer for proper tether attachment anchorages.

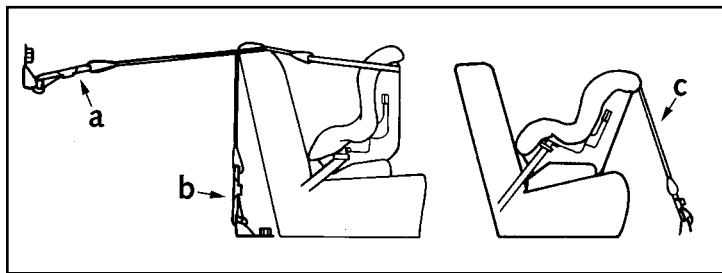

WARNING: DO NOT Hook the Versa-Tether to the bottom of a vehicle seat adjuster!

- 6 After you locate the tether tighten by pulling the strap in your Versa-Tether as shown above. Your child seat should be secure.

- 7 Verify that there is tension in the tether strap and that child seat is properly secured.

IMPORTANT: The proper seat angle is the angle where your child rests comfortably back, but never more than 45 degrees from vertical.


Releasing the Versa-Tether

To release the Versa-Tether, lift the adjuster tab on the tether strap, then pull to loosen. Unhook the tether from tether anchor point to release child seat.

Using the Tether Connector Strap (rear facing only)

Sometimes it is not possible to find a location to properly anchor the tether or the structural part of the seat is too large for the hook. Use the tether connector strap to assist in connecting to an anchor point.

- 1 Locate a seat frame bar, vehicle seat leg, or a fixed vehicle seat belt anchor that is bolted to the floor which the strap can be wrapped around.
- 2 Loop the strap around the metal anchor, then take the metal d-ring and lace it through the hole on the other side of the strap.
- 3 Pull the metal d-ring all the way through until strap is tight around the tether anchor.
- 4 Attach the tether hook to the strap or d-ring.

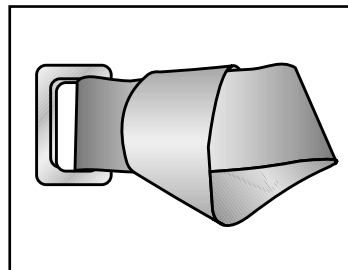


Checking Buckle Position

WARNING: The position of the vehicle seat belt buckle can affect the stability of your child seat. In an accident an improperly positioned buckle could come loose and your child would be unprotected.

If the buckle lies near the position marked as wrong, (✗) when the vehicle belt is tightened, then try fitting your child seat in another seating position in your vehicle.

If it is not possible to achieve the correct position (✓) for the buckle then another seating position **MUST** be used.

IMPORTANT: Check that your child seat is secure before each trip.

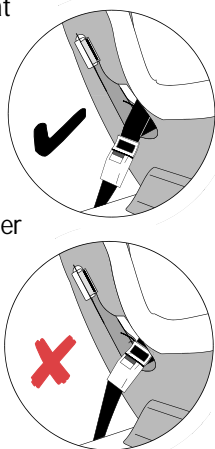

Recline Adjustment

This child seat can be used in either awake or sleeping position. Pull the recline handle, then slide the seat shell into the desired position. Let go of the recline handle, then verify that the child seat has locked into position.



Using the Buckle

Fastening the Buckle


- 1 Hold the buckle with one hand.
- 2 Use your other hand to insert one tongue at a time into the buckle. Proper connection is confirmed with a positive click after inserting the second buckle tongue.

Releasing the Buckle

- 1 Brace the rear of the buckle with hand.
- 2 Use thumb to press release button until tongues are ejected from buckle.


NOTE: Periodically clean the buckle to ensure proper operation. See section *Cleaning the Buckle* on page 33.

Open the chest clip by squeezing the middle tab, then pulling the two pieces apart.

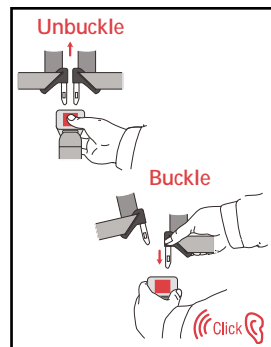

Using the Chest Clip


IMPORTANT: The correct height for the chest clip is at the middle of the chest, level to the armpit. Always make sure that the harness is tight before each use or after any adjustments.

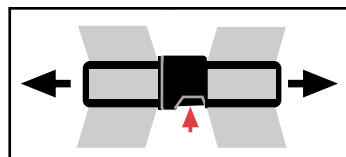


Securing Your Child

Once the child seat has been installed in the vehicle, follow these instructions to secure your child in the child seat.


1 Loosen the harness by pushing the adjuster lever located in front of the seat, then pull the shoulder straps forward (Fig. A).

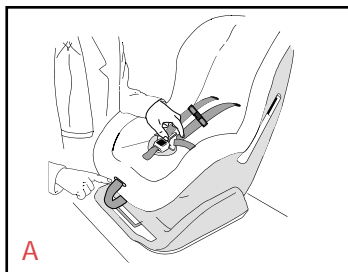

2 Unfasten the chest clip by squeezing the middle tab. (Fig. B).

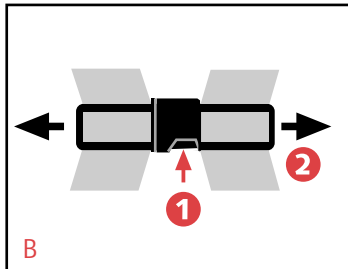

3 Unfasten the buckle by pressing down on the middle button. (Fig. C).

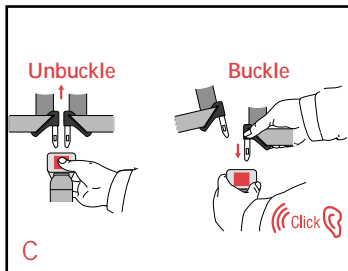


4 Move the harness straps to the side of the seat. Use the hook and loop fastener located on the straps and side of the cover to aid in holding the straps.

5 Place child in the child seat.

6 Position the harness straps around the child and fasten the child seat buckle (Fig. C). Proper connection is confirmed with a positive click after inserting the second buckle tongue.

Securing Your Child

7 Gently pull up on the harness straps to tighten the lap section of the harness, which should fit low on your child's body (Fig. D).

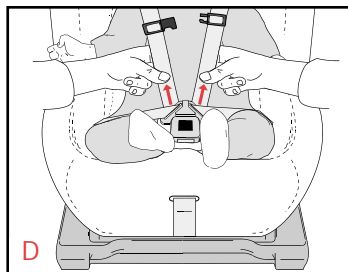


8 Slowly pull the adjuster strap to tighten the harness around the child (Fig. E).

IMPORTANT: Harness should have a comfortable, but **SNUG** fit around the child. A snug fit allows you to place two fingers between your child's body and the harness.


9 Fasten the chest clip by connecting the two halves together.

IMPORTANT: The correct height for the chest clip is at the middle of the chest, level with the child's armpit.

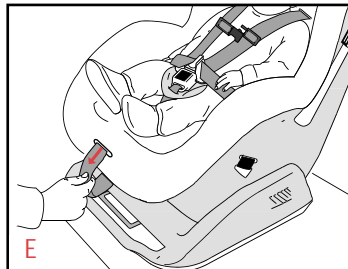

10 Verify that harness is not twisted and child is properly secured (Fig. F).


11 See *Checking Harness Height* on page 28.

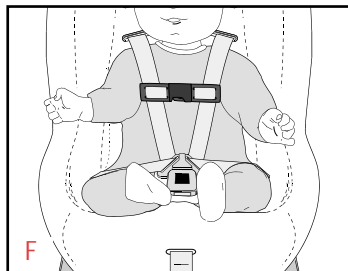

Checking Harness Height

To Check Harness Height:

- 1 Place child in child seat, then secure harness (see pages xx-xx).
- 2 Observe where the shoulder harness is positioned on your child.
 - **Rear Facing Strap Height:** Harness Straps should be located at or below the child's shoulder.
 - **Forward Facing Strap Height:** Harness Straps should be located at or above the child's shoulder.

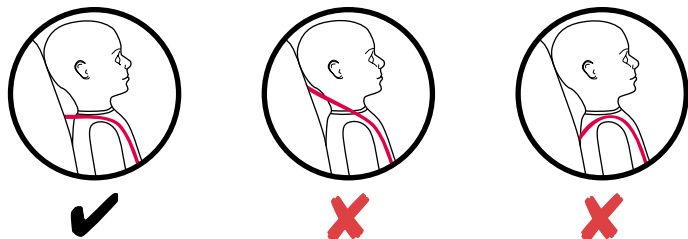

4 If harness height is okay, continue using child seat without adjustment. If harness height requires adjustment, refer to *Adjusting Harness Height* on page 29 or 30.

NOTE: Once the top slots become necessary, your child may continue to use the seat until the center of the ears become level with the top of the seat shell or weight exceeds 40 pounds (18 kg).

Adjusting Harness Height

Harness Height Adjustment Roundabout Only

NOTE: For Advantage harness height adjustment, see page 30.

1 Loosen the harness by pushing the harness release button while pulling the shoulder straps forward as far as possible (Fig. A).

2 From the rear of the child seat, unhook the shoulder harness from the yoke (Fig. B).




3 Pull straps through the shell and cover, to the front of the seat.

4 Thread the harness straps through the appropriate harness height slots (Fig. C).

5 Reattach harness straps to the yoke (Fig. B).

6 Pull harness adjuster strap to tighten the harness.

7 Verify that all straps are threaded at the same height and are not twisted.

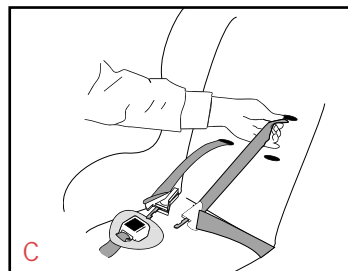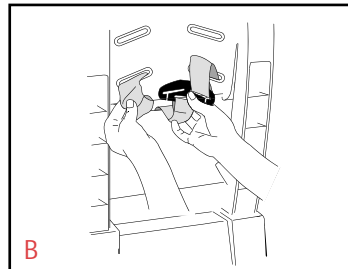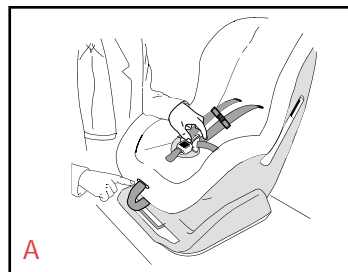


Adjusting Harness Height

Harness Height Adjustment Advantage Only

NOTE: For Roundabout harness height adjustment, see page 29.

- To raise the shoulder straps, turn adjuster knob away from child.
- To lower the shoulder straps, turn adjuster knob toward child.

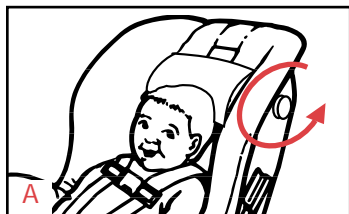

Care and Maintenance

Cover Removal

- 1 Loosen the harness by pushing the harness release button while pulling the shoulder straps forward as far as possible.
- 2 Unhook the shoulder straps from the yoke on the rear of child seat.
- 3 Pull straps through the shell and cover, to the front of the seat.
- 4 Remove the buckle and belly pad (see page 31).
- 5 Gently remove the upper portion of the cover. Be careful not to damage the energy absorbing foam.

Care and Maintenance

6 Pull the harness straps, buckle tongues, and chest clip through the slots in the cover.

7 Advantage only: remove the headrest cover from the headrest.

8 Gently remove the entire cover from the seat.

Refitting the Cover

To refit the cover, reverse *Cover Removal* directions. Make sure that the shoulder straps are threaded through the chest clips and that the harness is not twisted.

Buckle Removal

1 Fully recline the child seat.

2 Locate the metal buckle strap retainer on bottom of the seat.

3 Pull retainer away from child seat to loosen.

4 Turn the retainer so that the short side will go through the slot in the seat shell (*Fig. C*).


5 Push the retainer through slots in the shell and cover to the front of the seat.

Rethreading the Buckle

1 Locate the necessary buckle slot.

2 Turn the buckle retainer so that the short side will go through the slot in the cover and seat shell (*Fig. C*).

3 Pull buckle away from seat until tight, then verify that the strap is not twisted and the release button is facing outward.

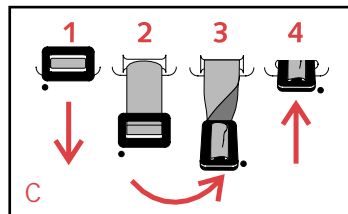

Cleaning the Cover

HAND WASH using cold water and mild soap.

LINE DRY to prevent cover from shrinking.

DO NOT:

- Use bleach
- Machine wash
- Machine dry

Cleaning the Shell

SPONGE CLEAN using warm water and mild soap.

TOWEL DRY

DO NOT:

- Use abrasive cleaners
- Use solvents, detergents, or abrasive cleaners
- Remove the harness adjuster strap

Cleaning the Harness

SPONGE CLEAN using warm water and mild soap.

TOWEL DRY

DO NOT:

- Use bleach
- Use solvents
- Remove the harness adjuster strap
- Machine dry
- Machine wash

Cleaning the Buckle

THOROUGHLY RINSE using warm water (*Fig. C*).



SOAK using warm water to loosen hardened liquid or food.

TEST the buckle by fastening and unfastening until you hear a positive click after inserting the second buckle tongue. (*Fig. D*) If click is not heard continue to clean.

TOWEL DRY

DO NOT:

- Lubricate
- Use solvents
- Use soap or household detergents

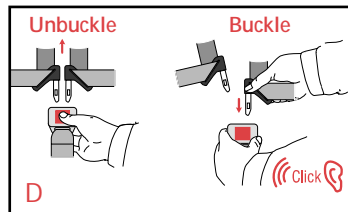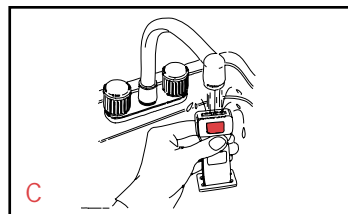

This child restraint (Roundabout™ or Advantage™) was manufactured by Britax. Britax Child Safety, Inc. ("Britax") warrants this product to the original retail purchaser as follows:

LIMITED ONE-YEAR WARRANTY

This product is warranted against defective materials or workmanship for one year from the date of original purchase. Proof of purchase is required. Your exclusive remedy for this warranty is that Britax will, at its option, provide repair or replacement components for this product or refund the original purchase price of the product. Britax reserves the right to discontinue or change fabrics, parts, models or products, or to make substitutions.

To make a claim under this warranty, you must contact Britax Consumer Services at 1-888-427-4829 or write to us using the address on the back cover of this booklet. Proof of purchase is required.

PLEASE COMPLETE AND MAIL THE OWNER REGISTRATION CARD WITHIN (30) DAYS OF PURCHASE.

WARRANTY LIMITATIONS

This warranty does not include damages which arise from negligence, misuse or use not in accordance with the product instruction.

LIMITATION OF DAMAGES

The warranty and remedies as set forth above are exclusive and in lieu of all others, oral or written express or implied. In no event will Britax or the retailer selling this product be liable to you for any damages, including incidental or consequential damages, arising out of the use or inability to use this product.

LIMITATIONS OF WARRANTIES AND OTHER WARRANTY TERMS AND STATE LAWS

Any implied warranties, including implied warranties of merchantability and fitness for a particular purpose, shall be limited to the duration and terms of the express written warranty. Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific legal rights, and you may have other rights, which vary from state to state. Neither Britax, nor the retailer selling this product, authorizes any person to create for it any other warranty, obligation, or liability in connection with this product.

Registration Information

Fill out the registration card and mail it in today!

Child restraints could be recalled for safety reasons. You must register this restraint to be reached in a recall. Send your name, address and the restraint's model number and manufacturing date to Britax Child Safety, Inc. 13501 South Ridge Drive Charlotte, NC 28273 or call 1-888-4BRITAX. For recall information, call the U.S. Government's Auto Safety Hotline at 1-800-424-9393 (202-366-0123 in DC area).



R1:03/02
P201200

Britax Child Safety, Inc.
13501 South Ridge Drive
Charlotte, NC 28273
USA

Tel: 704-409-1700
www.BritaxUSA.com